




SE0236C

## Blemish jelly eraser with MEL[O]STEM™ MBAL (\*) and BB-BIONT™ MBAL (\*\*)

(\*) Patent pending

(\*\*) Patent N° FR 3 112 941; WO 2022/023406

Recover an even and radiant complexion thanks to this blemish jelly eraser. **Mel[o]stem™ MBAL** improves complexion while **BB-Biont™ MBAL** acts on skin's texture, fading away acne marks. **Syncrowax™ ERLC** and **Syncrowax™ HRC** in association with **SP Cithrol™ GMS SE 40 MBAL** build the architecture of the jelly structure. **Red clay ER** adds a touch of purity while **Crodarom® Nordic Cotton** provides a cocooning feeling. This gentle eraser removes dead cells to reveal a younger and healthier looking skin. To be ACTIVELY committed, the formulation has a natural origin content >95%\* according to the ISO 16128-1 and ISO 16128-2 standards.

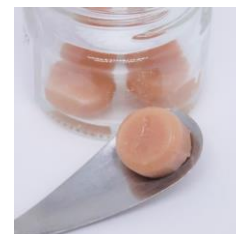

Ingredient/INCI Name	Functionality	% w/w
<b>Part A</b>		
Water Deionised (Aqua)	-	To 100
Potassium Sorbate	Preservative	0.10
<b>Red clay ER</b> (Illite (and) Kaolin) <sup>4</sup>	Absorbent agent	0.60
<b>Part B</b>		
Water Deionised (Aqua)	-	0.80
Lactic Acid	pH Adjuster	0.04
<b>Part C</b>		
Glycerin	Humectant	13.00
Pentylene Glycol	Humectant	5.00
Propanediol	Humectant	3.00
Kelcogel® CG-HA (Gellan Gum) <sup>6</sup>	Thickener agent	0.70
Xanthan Gum FNCS-PC (Xanthan Gum) <sup>7</sup>	Thickener agent	0.30
<b>Part D</b>		
<b>Syncrowax™ ERLC</b> (C18-36 Acid Glycol Ester) <sup>1</sup>	Bodying agent	10.00
<b>SP Cithrol™ GMS SE 40 MBAL</b> (Glyceryl Stearate SE) <sup>1</sup>	Emulsifier	3.00
<b>Syncrowax™ HRC</b> (Tribehenin) <sup>1</sup>	Bodying agent	3.00
<b>Part E</b>		
<b>Crodarom® Nordic Cotton</b> (Water (and) Glycerin (and) Eriophorum Spissum Flower/Stem Extract) <sup>3</sup>	Pampering botanical	1.00
<b>Part F</b>		
<b>BB-Biont™ MBAL</b> (Glycerin (and) Aqua (and) Palmitoyl Pentapeptide-4) <sup>2</sup>	Smoothing active ingredient	1.00
<b>Part G</b>		
<b>Mel[o]stem™ MBAL</b> (Glycerin (and) Monarda Didyma Callus Extract (and) Water (Aqua) (and) Propanediol (and) Pentylene Glycol (and) Xanthan Gum) <sup>2</sup>	Anti-age spot active ingredient	3.00
<b>Part H</b>		
<b>Soin divin</b> <sup>5</sup>	Fragrance	0.10

Suppliers: 1: Croda 2: Sederma 3: Crodarom 4: Alban Muller 5: Parf'ex 6: CP-Kelco 7: Jungbunzlaeuer

**Procedure:**

Weigh Part A. Weigh Part B and mix well. Part A: Adjust pH =5.50+/-0.10 with Part B, mix well. Weigh and heat Part A+B to 90°C in bain-marie with helix stirring. Weigh Part C and mix well. Add slowly Part C to Part A with normal helix stirring at 90°C in bain-marie. Allow Part A+B+C heating at 90°C for 1 hour in bain-marie with helix stirring. Weigh and heat Part D to 90°C in bain-marie. Add Part D into the previous part with strong helix stirring. Weigh and add Part E into the

[www.crodapersonalcare.com](http://www.crodapersonalcare.com)Sederma [sederma@sederma.fr](mailto:sederma@sederma.fr)Asia Pacific [pc-asia@croda.com](mailto:pc-asia@croda.com)Europe, Middle East & Africa [pc-europe@croda.com](mailto:pc-europe@croda.com)Crodarom [marketing@crodarom.fr](mailto:marketing@crodarom.fr)Latin America [marketinglatam@croda.com](mailto:marketinglatam@croda.com)North America [marketing-usa@croda.com](mailto:marketing-usa@croda.com)

02/23PCSDf335V1EN

Page 1 of 2

SEDERMA





previous part and mix well with rapid helix stirring. Add Part F and mix well with rapid helix stirring. Out of the bain-marie add Part G and mix well with rapid helix stirring (s=450 rpm); Add Part H and mix well with rapid helix stirring (s=450 rpm) Pour into moulds immediately. Allow to cool for 15 minutes at room temperature.

Appearance: Beige opaque gel block
Stability: 3 months at 4°C, 25°C, 45°C and 1 month at 50°C
Centrifuge 10min @ 3000rpm and 1 x -80°C/+25°C 24 hours freeze-thaw cycle and autoclave 20min @120°C

This formulation was developed in France. Contact your local sales representative with enquiries as ingredient availability can vary by region.

Microcare® is a registered trademark of Thor  
Kelcogel® is a registered trademark of CP Kelco

\*Since the publication of the two parts of the ISO 16128-1 & ISO 16128-2 standards, we are aware of the ins and outs thanks to our involvement in different internal and external task forces at the international level. So, the following values are provided **according to our interpretation of the standard ISO 16128. They are likely to evolve along the way of discussions with professional federations of cosmetic industry.**

#### Non-warranty

The information in this publication is believed to be accurate and is given in good faith, but no representation or warranty as to its completeness or accuracy is made. Suggestions for uses or applications are only opinions. Users are responsible for determining the suitability of these products for their own particular purpose. No representation or warranty, expressed or implied, is made with respect to information or products including, without limitation, warranties of merchantability, fitness for a particular purpose, non-infringement of any third-party patent or other intellectual property rights including, without limit, copyright, trademark and designs. Any trademarks identified herein, unless otherwise noted, are trademarks of the Croda group of companies.  
©2023 Croda International Plc

SEDERMA

[www.crodapersonalcare.com](http://www.crodapersonalcare.com)  
Sederma [sederma@sederma.fr](mailto:sederma@sederma.fr)  
Asia Pacific [pc-asia@croda.com](mailto:pc-asia@croda.com)  
Europe, Middle East & Africa [pc-europe@croda.com](mailto:pc-europe@croda.com)

Crodarom [marketing@crodarom.fr](mailto:marketing@crodarom.fr)  
Latin America [marketinglatam@croda.com](mailto:marketinglatam@croda.com)  
North America [marketing-usa@croda.com](mailto:marketing-usa@croda.com)

02/23PCSDF335V1EN  
Page 2 of 2